

Helicoidal roller lime spreader



The lime spreader serves to distribute a layer of quicklime or other compounds used to sterilise the ground, to disinfect and to correct the acidity of the soil; it is also used to stabilise clayey soils of roadbeds. The helicoidal roller enables the uniform distribution of the material over the entire surface to be treated



AVAILABLE MODELS - WEIGHTS AND LOAD CAPACITIES

TYPE	MAX SIZE SPREADING WIDTH		WEIGHT CAPABILITY	
	m	m	kg	lt
SPC160B	1,66		390	950
SPC 200 B	2,06	1,90	430	1300
SPC 250 B	2,55	2,40	650	1850

ACCESSORIES

- Footprint bar and lights
- 3-point PTO for farm tractor (operator machines version on request).
- Lateral ball-bearings must be lubricate every 30 hours of work.
- Back lighting used during road transportation.
- Inner safety net to avoid contact with moving parts.

- External chain drive protected with a case to avoid contact with moving gears.
- Lateral feet for stoppage regulation of distribution springs.
- Power socket for lighting supply.
- Cover protection cloth.
- Lateral support feet (to be removed during work).
- Capacity flow regulator with weight compensation.



3-point PTO for farm

tractor (operator machines version on request).



External chain drive

protected with a case to avoid contact with moving gears.



Lateral ball-bearings

must be lubricate every 30 hours of work.



Back lighting used

during road transportation.



Lateral feet for stoppage regulation of distribution springs.



Power socket for lighting supply.



Capacity flow regulator

with weight compensation.



Inner safety net to avoid

contact with moving parts.



Cover protection cloth.

Lateral support feet (to be removed during work).